




U-Lock User manual and Instructions

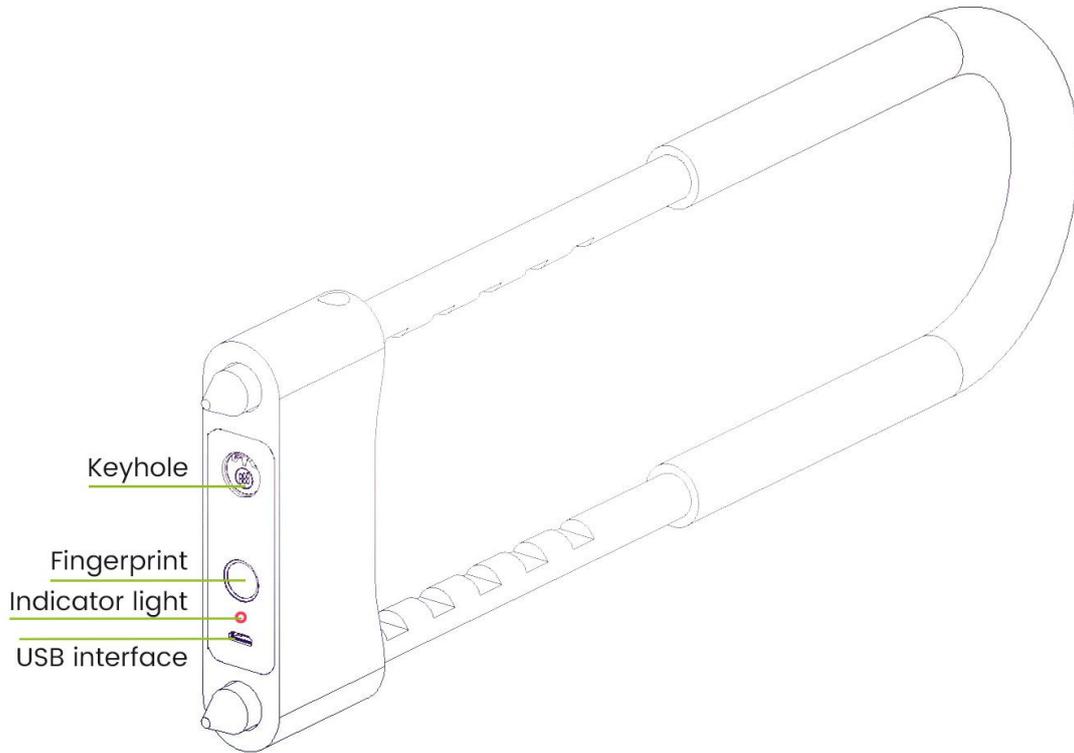

1. Product Description

(1)Micro USB charging interface is used in this product.

(2)This product factory default experience mode, any fingerprint can unlock. When in normal use, be sure to enter the fingerprint.

(3)This product supports 20 fingerprint input 1-2 fingerprint for administrator 3-20 fingerprint for ordinary users, more than capacity will not be stored.

(4)After this product resumes factory mode, will delete all fingerprints, including administrator and ordinary user fingerprints.

2. Indicator light prompt

Indicator status	Functional description
Blue light flashes once	Experience mode, any fingerprint can be unlocked
Long to blue light	Administrator fingerprint authorization registration
Green light flashing 3 times	Administrator fingerprint unlock success
Green light flashing once	Common user fingerprint unlock success / registration mode fingerprint entry success / delete mode fingerprint verification success



Red light flashing once	Fingerprint verification failed
Long press to red light flashing	Enter Delete Mode
5 consecutive flashes of red light	Low Power Warning
The red light is always on	Charging
The red light goes	Charging completed

3. Administrator 1 fingerprint entry

(1) Press the fingerprint to unlock, the blue light lights up; keep the fingerprint pressed until the blue light is on and lift the fingerprint.

(2) Press the fingerprint to be registered, register successfully, green light flashes 1 time; registration fails, red light flashes 1 time; use the same fingerprint, press continuously 8 times.

(3) The fingerprint is continuously lifted and pressed 8 times. After the green light is turned on, the indicator lights go out, the registration is completed; if the red light is turned on and the indicator lights go out, the registration fails and needs to be re-registered.

4. 2 Administrator and 3-20 General User Fingerprint Entry

Enter the new fingerprint requires administrator fingerprint authorization, the second fingerprint is also the administrator, the third ~20 fingerprints are ordinary users.

(1) Press the administrator's fingerprint to unlock, the green light flashes 3 times; keep the fingerprint pressed until the blue light is on and lift the fingerprint.

(2) Press the fingerprint that needs to be added, register successfully, green light flashes 1 time; register failed, red light flashes 1 time; use the same fingerprint, press continuously 8 times.

(3) The fingerprint is continuously lifted and pressed for 8 times. When the green light is turned on and the indicator lights go out, the fingerprint is added; if the red light is turned on and the indicator lights go out, the added fingerprint fails and needs to be re-authorized to add.

5. Restoration of factory settings

(1) Administrator fingerprint (1,2) permissions can delete all fingerprints, ordinary users (3~20) fingerprints need to be removed under the administrator fingerprint authorization.

(2) Delete the fingerprint of the ordinary user - press the administrator's fingerprint until the red light is lit up, press the fingerprint of the ordinary user that needs to be deleted, and when the green light is lit after the match is successful, the fingerprint of the ordinary user is deleted successfully.

(3) Delete the administrator's fingerprint - press the administrator's fingerprint until the red light is on, lift the fingerprint, press the administrator's fingerprint, and when the green light is on after the match is successful, remove all fingerprints and restore the factory settings.

Be sure to restore the U lock to the factory before applying for after-sale service